
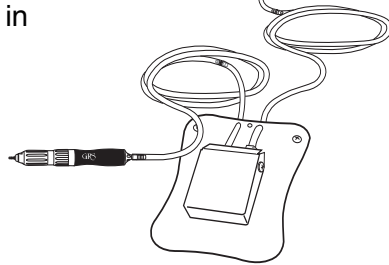


GRS Foot Control *for Rotary Air Handpiece*

Connect the air supply hose to a filtered air regulator that is recommended by the rotary handpiece manufacturer.


GraverMax and GraverMate owners may connect the air supply hose to the AUXILIARY connector located in the front center of the machine. See illustration at right.

The GRS Foot Control is virtually maintenance free... just clean occasionally.

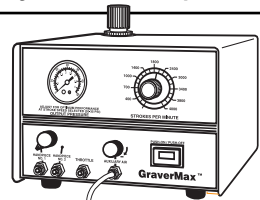

1 CONNECT HOSE ON RIGHT SIDE TO AIR SUPPLY

REFER TO ROTARY HANPIECE REQUIREMENTS

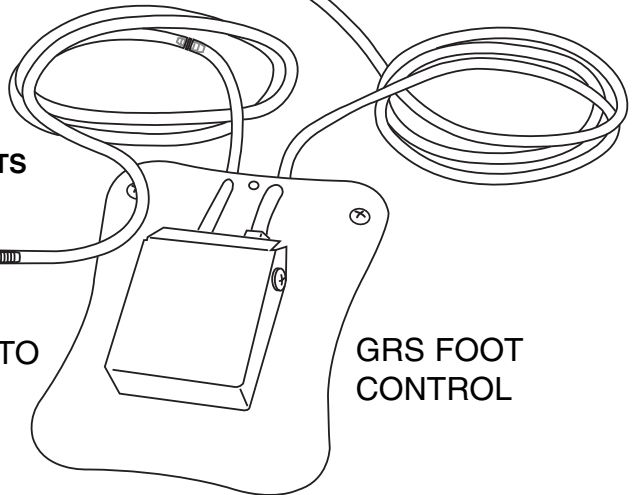

GRS FOOT CONTROL

2 CONNECT LEFT HOSE TO ROTARY HANPIECE



900 Overlander Road
Emporia, KS 66801 USA

Toll Free: 1-800-835-3519
Fax: 620-343-9640
Tel: 620-343-1084
e-mail: GRS@GrsTools.com

IMPORTANT: Do not operate a rotary handpiece until you are thoroughly familiar with proper operating procedure. READ THE INSTRUCTIONS THAT COME WITH THE ROTARY HANDPIECE CAREFULLY.