


CHUCK REPLACEMENT INSTRUCTIONS FOR THE

Ultra High-Speed Rotary Handpiece



OLD CHUCK REMOVAL


Insert a bur or dummy bur and remove the cartridge. Hold the rotor with two fingers as shown in **Fig 1** and place the wrench on the rotor nut and loosen by turning counterclockwise. When the rotor nut is loose, push out the chuck carefully (**Fig 2**) with the shank of a bur from the back of cartridge. This will push out the guide-bush and the chuck.

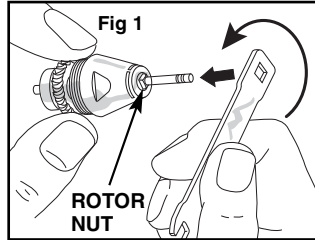

NOTE:




The guide-bush is a very small part, be careful not to lose it.

- Clean the inside of rotor shaft with oil spray after the removal of chuck

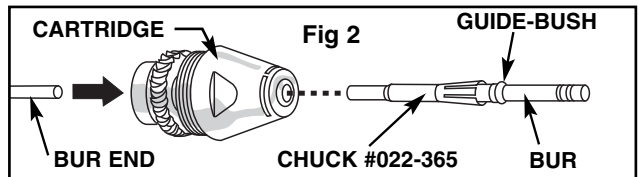

NEW CHUCK INSTALLATION

Insert a bur into a new chuck and push it into the rotor shaft (**Fig 3**). Mount the guide-bush on the bur (**Fig 4**) making sure the longer part of the guide-bush is facing the rotor. Attach the rotor nut and tighten with the wrench provided (**Fig 5**).

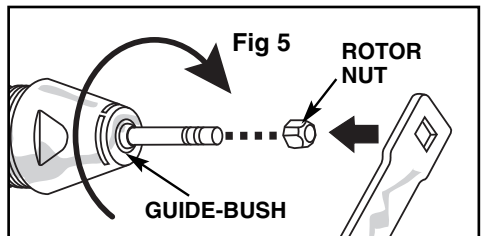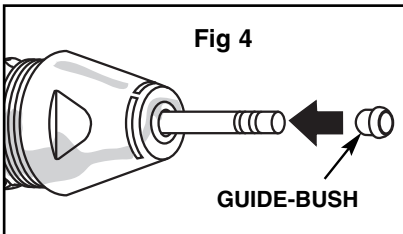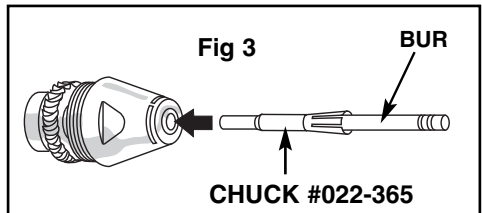

Glendo Corporation
900 Overlander Road
Emporia, KS 66801 USA
1-800-835-3519

Fax: 620-343-9640
Tel: 620-343-1084
www.GrsTools.com
e-mail: glendo@glendo.com